


GRAVURE PRINTING MACHINE FOR MARKING OPPOSITE SIDES OF HOT PLASTIC INSULATED CABLES

- Dual Head Printer
- Marking of text and numbers
- Medium speed
- Exchangeable Ink Supply System

KS 510 C-FM

APPLICATIONS

Marking opposite sides of cables with the same or different codes within the extrusion line.

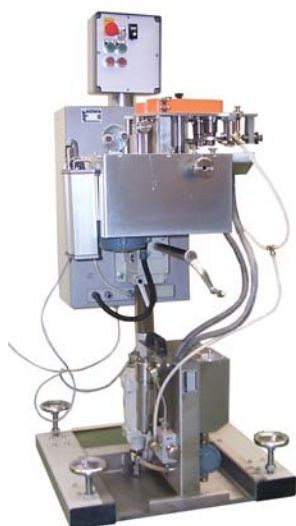

SPECIFICATIONS

Max. printing speed:
500 m/minute
Cable diameter: 1 mm to 20 mm
Printing discs: 86 mm in diameter, concave rim

STANDARD CONFIGURATION

Frame with support column and height adjustment crank mechanism.
Marking unit with synchronized, phase-adjustable drive for two facing printing discs.
Integrated control electronics and built-in control console.
1 set of dedicated ink wipers and guide rollers matching the specified printing discs.
Replaceable, compact ink supply module with ink tank, pump, cooler, filters, and ink flow fine adjustment valve.
Complete tacho generator unit.
Complete accessories kit without printing discs.



FEATURES

Electronically synchronized printing disc drive.
Mechanical phase control for staggered marking.
Replaceable ink supply module for quick color change within about 2 minutes.
Optional second ink supply module allows even faster color change.
Suitable for concave rim printing discs.
Remote tacho generator unit for measuring cable speed.



RECOMMENDABLE OPTIONAL DEVICE:

WNB – Misting unit for the application of fine water dust for pre-cooling of the hot wire immediately after the extruder. Applies a fine water layer to the wire surface that evaporates before the wire enters the printer. Reduces the wire surface temperature and avoids the hot plastic material sticking on the print wheel. Replaces pre-cooling trough, air wipers and vacuum device. No need of relatively extensive and at higher speeds insufficiently working air blowers. – see leaflet WNB

Options and Accessories

Stroboscope. Option B

Automatically synchronized flashing stroboscope for monitoring the quality of printed marks. High quality finish with tight and resistant to solvent metal casing.



Medek & Schörner also offers a **video system for monitoring the print quality** of fast-running cable printing machines, e.g. allowing real-time inspection for bad quality and/or missing prints. See leaflet VQS/VST

Replaceable ink supply module. Option FM

With ink tank, pump, cooler, filters, and ink flow fine adjustment and selector valves. Allows the printing ink to be changed in about 2 minutes. Ink can be stored in the ink tank for several weeks with no degradation of ink properties.

Automatic viscosity control for printing inks – Option V

A rotating sensor causes thinner to be added when the viscosity deviates from a preset value.

Ink level sensor and indicator system – Option LD

Triggers a warning signal as the ink level drops below minimum.

Ink flow sensor and indicator system – Option FW

Triggers a warning signal as the ink flow deviates by an adjustable amount from the preset value.

Ink Supply Module Service Rack

Castor mounted rack with power supply and compressed-air input for one Ink Supply Module. For easy rinsing, cleaning, and changing of inks away from the marking machine.



Printing Discs

Printing discs are available with any combination of numbers, letters, or other characters (specify when ordering).

All printing discs are 86 mm in diameter, with a 12.7-mm (1/2") center hole.


Ink Wipers, Guide Rollers

The ink wipers and guide rollers required for the specified printing discs are supplied with each KS Series marker. For marking cables of different diameters, you will need one set of appropriate ink wipers and guide rollers for each cable gauge. We recommend to order these along with the printing discs.

Doctor Blades

New machines or ink wipers are supplied with a set of doctor blades of the appropriate size.

However, we recommend to keep several replacement doctor blades for each type of printing disc in use. Doctor blades can be sharpened several times.

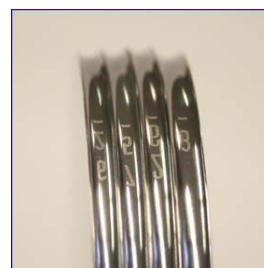

Marking Inks

We recommend inks of a viscosity of approx. 40 to 70 seconds (as measured with a DIN 4-mm measurement cup) containing low to medium volatility solvents to prevent premature pigment sedimentation on the printing discs.

MEDEK & SCHÖRNER GMBH
Cable Marking Systems

Kuefsteingasse 32 · A-1142 Vienna/Austria (Europe) · Phone 43-1-982 32 04-0
Fax 43-1-982 72 96 · e-mail: m+s@medek.at · www.medek.at