

HIGH-SPEED INDENTING/EMBOSSING MARKER

- Indent marking or embossing
- Single or double-sided marking
- Line speeds up to 1000 m/min

KSW

APPLICATIONS


Indent marking or embossing of cables up to 30 mm in diameter immediately after the extruder head

STANDARD CONFIGURATION

Frame with support column and crank-operated height adjustment mechanism.
Marking head with cooling trough.
Marking wheels and guide rollers available separately. (Specify when ordering.)

FEATURES

Marking machine for insulated cables. Indent marking or embossing. Single or double-sided marking.
Marking wheels mounted on water cooled shafts to prevent insulation from sticking to marking wheels and ensure perfect marking at extrusion line speeds of up to approx. 1000 m/minute.
Height of each marking wheel adjustable separately.

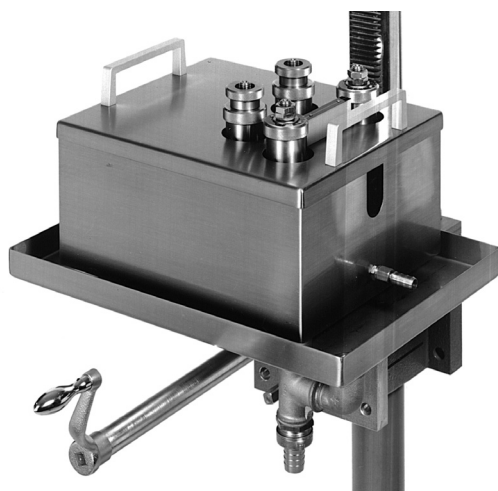

SPECIFICATIONS

Max. marking speed:
1000 m/minute
Product diameter:
1.5 to 30 mm
Marking wheels:
86 mm in dia.

ACCESSORIES

Marking wheels
Pressure rolls

MEDEK & SCHÖRNER GMBH
Cable Marking Systems